


CAR AND TRUCK INSTALLATION GUIDE

1. Raise vehicle hood. Locate air intake tube. This tube goes from the air box cover to the throttle body.
2. Loosen the clamp that holds the tube to the air box cover. Disconnect intake tube from air box cover.
3. Insert Economaxx into the air intake tube with small end facing the throttle body using a friction fit. **Do not force.**
4. Reinstall air intake tube to air box cover and tighten clamp.
5. If the Economaxx does not friction fit into the air intake tube then the following options apply.

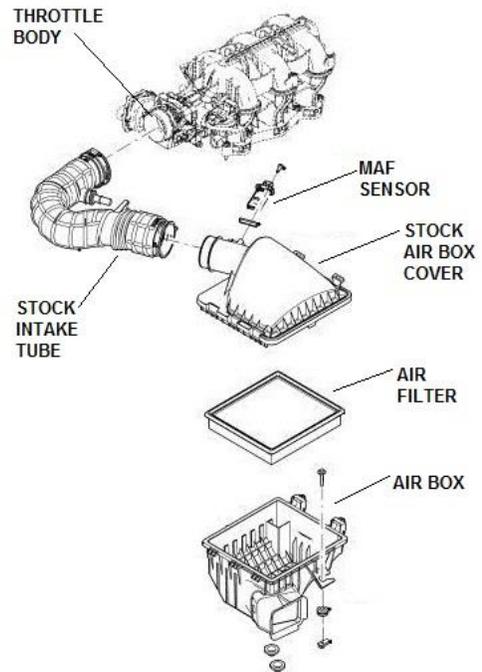

a) If there is **NO** sensor (MAF) in the outlet of the air box cover, remove the cover. Use a 1/8 inch drill bit and drill a pilot hole in the hard plastic outlet of air box cover. **REMOVE** all plastic shavings. Insert Economaxx so that small end is facing the throttle body. Fasten Economaxx into place using the hardware provided so that the screw is centered between two fins and travels through the center of the core of the Economaxx. **DO NOT OVER TIGHTEN.** Reinstall air box cover.

b) If there **IS** a sensor (MAF) in the outlet of the air box cover, **REMOVE** the air intake tube. Using a 1/8 inch drill bit, drill a pilot hole in the smooth part of the hard plastic tube ensuring Economaxx is kept as close to outlet of the air box cover as possible. **REMOVE** all plastic shavings. Insert Economaxx so that small end is facing the throttle body. Fasten Economaxx into place using the hardware provided so that the screw is centered between two fins and travels through the center of the core of the Economaxx. **DO NOT OVER TIGHTEN.** Reinstall air intake tube.

Fuel Genie Solutions / Econo Maxx / The Fuel Genie Corporation will not at any time be held liable for any damages that may occur as a result of incorrect installation.